

ASSEMBLY INSTRUCTIONS FOR PODIUM GUARDRAIL 2374-202 / 2374-203 / 2374-204


REFERENCE 2374-208 AND 2374-209

Tools needed: a BTR Allen key and open-ended spanner for M6 and a BTR Allen key and open-ended spanner for M8


For podiums prior to 2015, a drill with a $\varnothing 8.5$ bit

Step 1:

Select the assembly side and remove the holding screws

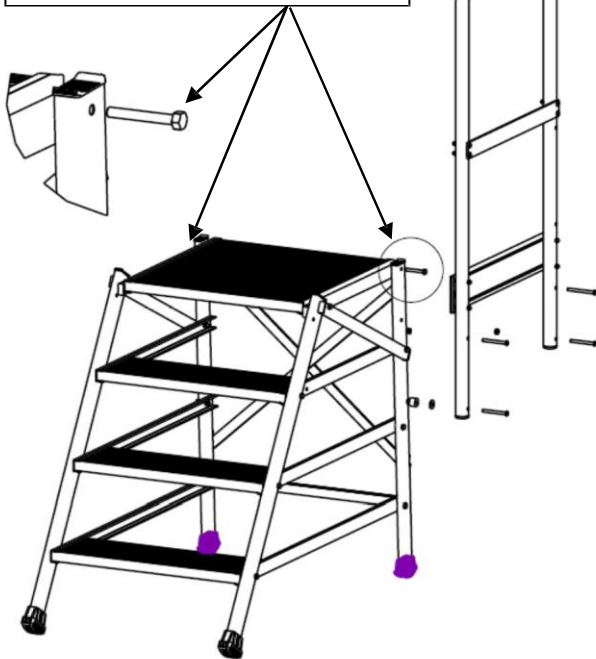


Drilling positions from the side edges if the platform is prior to 2015

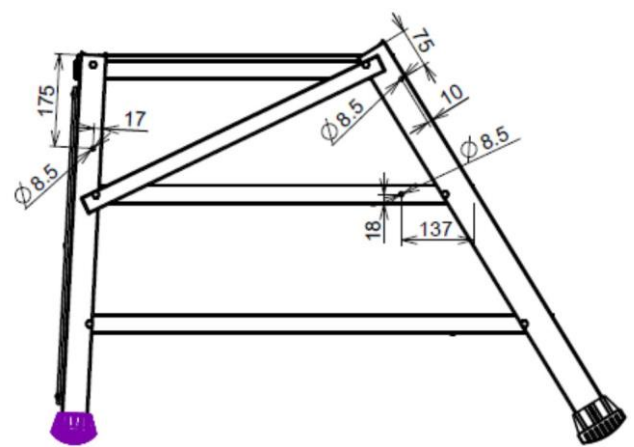


Step 2:

Invert the assembly direction of the middle rail and the toeboard to assemble the left side version

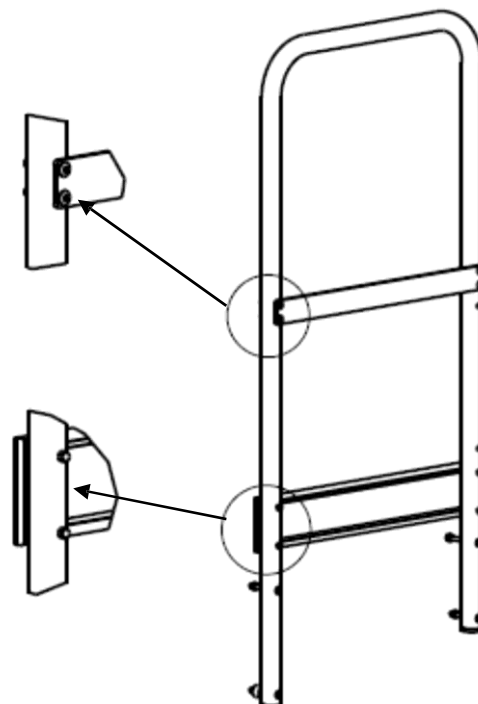

Step 3:

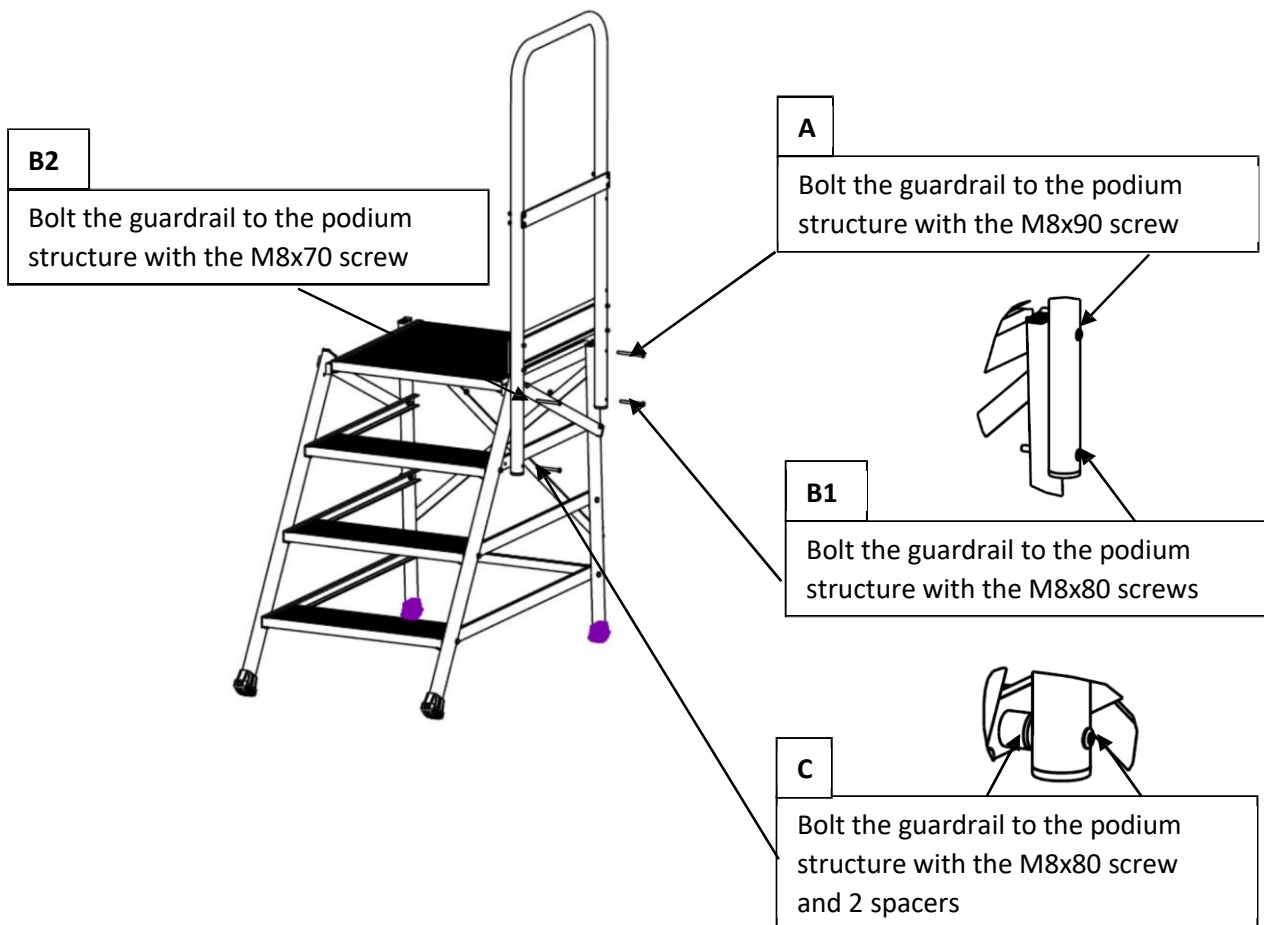

Step 4:

