


SLAB ACCESS LADDER

USER MANUAL




61029-495 ind 00

Date of publication: 27/07/2021

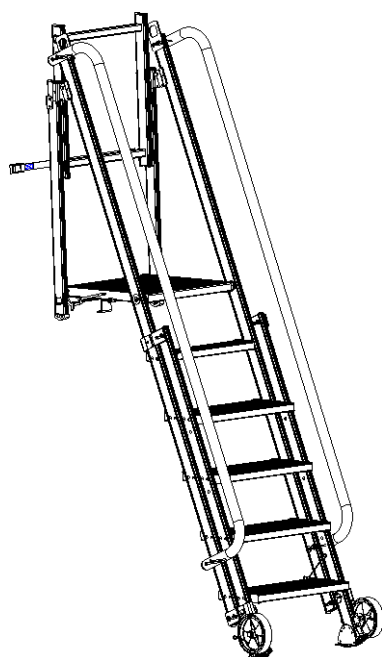
02451 206

Slab access ladder 6+4 steps

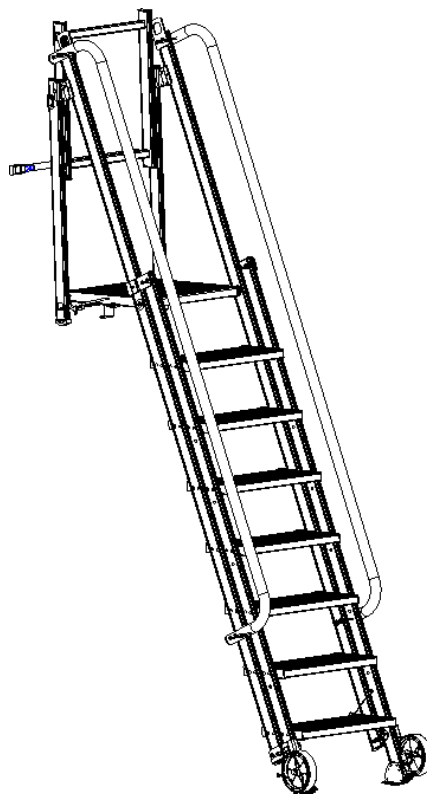
02451 208

Slab access ladder 8+7 steps


02451 212

Slab access ladder 12+12 steps

Référence						
02451206	3178740233617	6+4	20.6 Kg	1.29 m	1.99 m	0.62 m
02451208	3178740233624	8+7	24.7 Kg	1.76 m	2.92 m	0.62 m
02451212	3178740233631	12+12	32.1 Kg	2.68 m	4.77 m	0.62 m


Warning

- Slab access ladders are products designed for professionals to safely access high slabs/platforms.
- Slab access ladders should not be used as a workstation.
- Carefully read all the instructions before starting assembly.
- Keep the instructions for future reference.
- Two people are required to set up the ladder.
- Setting up the ladder should be done by appropriately skilled people.
- Protective gloves are required when handling the ladder.
- The ladder can be moved on its two wheels or by being carried by two people.
- The lifting rings (yellow parts) can be used to suspend the product.



1 Adjusting the ladder to the slab height.

With the product laid flat, and the handrails facing downwards, unscrew the two sliders by removing the safety pin, ¹ and then the locking pin. ²

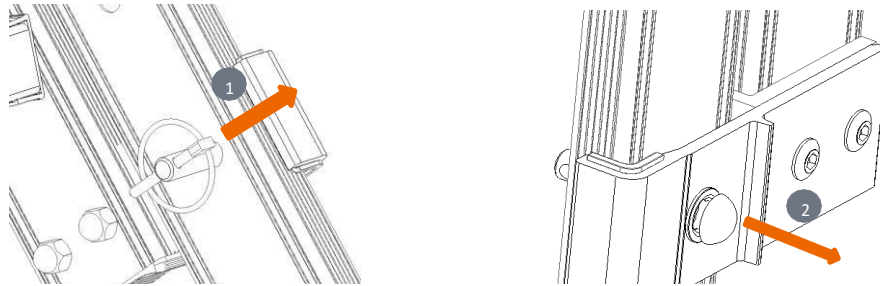


Pull down the lower part of the ladder (with the wheels) to adjust its length to the height of the slab, and replace the locking pin and the safety pin in the correct hole according to the diagrams below.

02451 206 – 6+4 Steps

Adjustment according to slab height


If the height falls between two settings, use the higher of the two

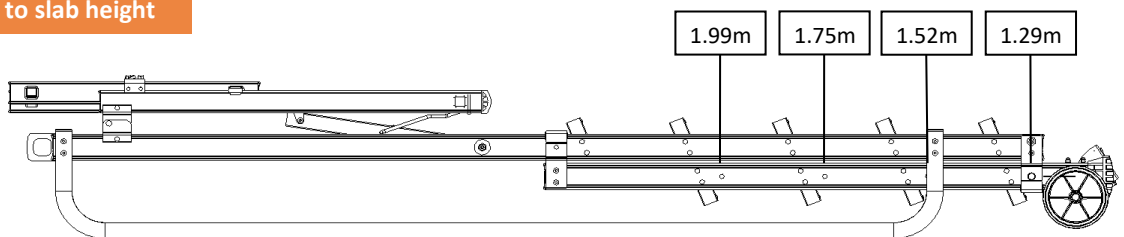

02451 208 – 8+6 Steps

Adjustment according to slab height


If the height falls between two settings, use the higher of the two

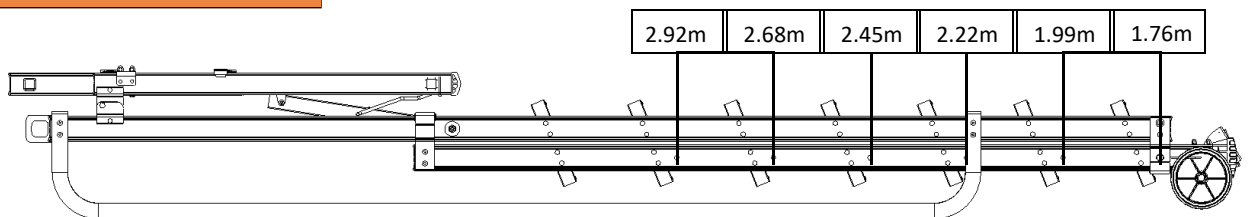

02451 212 – 12+12 Steps


Adjustment according to slab height

If the height falls between two settings, use the higher of the two

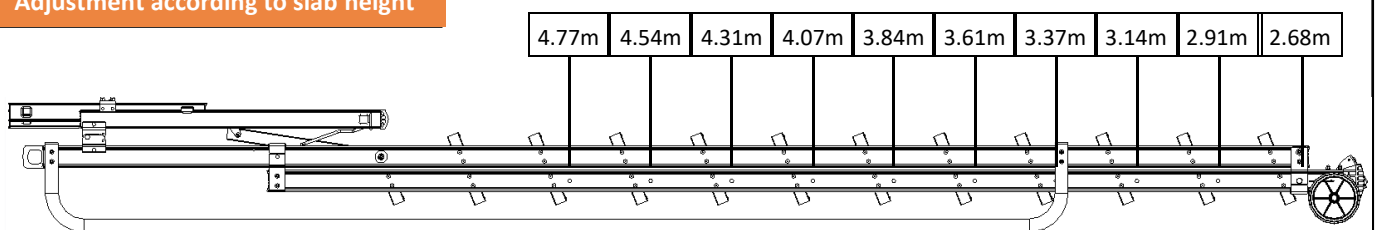

2 Unlocking the platform

Undo the retaining strap which holds the support struts and the gate to the uprights, then reattach it to just the support struts and the gate. This is to keep the gate closed whilst the ladder is being put into position.

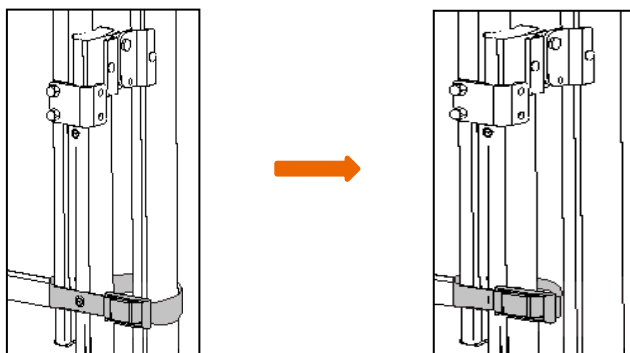




Setting up the ladder

3 Positioning the ladder on the slab

Using 2 people, carry the product with the handrails facing down to just in front of the slab.

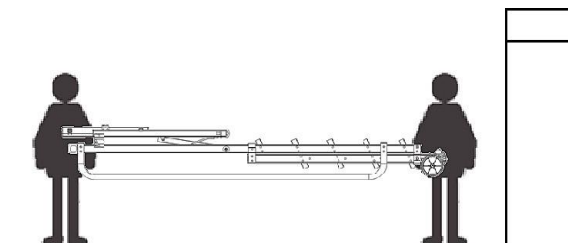


Always hold the ladder by the uprights or the handrails.

Holding the ladder by the handrails, raise it until the platform automatically deploys. ¹

Ensure that there is enough distance between the slab and the bottom of the ladder to be able to raise the ladder.

(Measurement X)


Then move the ladder forward until the support struts are positioned on the slab. ²

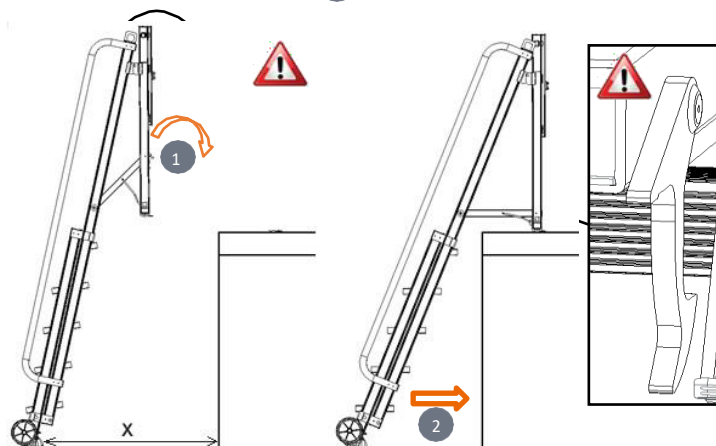

Models	X minimum
02451-206	1.5m
02451-208	1.9m
02451-212	2.6m

Check that the lock is correctly positioned.

Once the ladder is in position, fasten it down at shoe level and/or platform level.

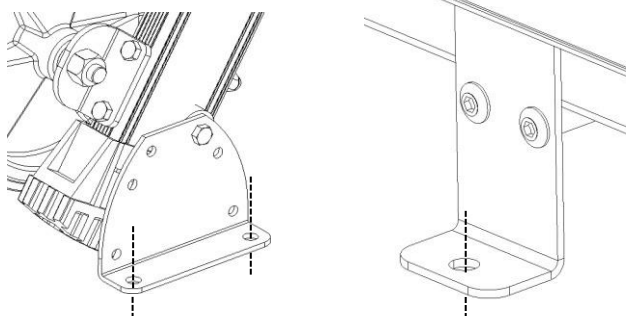


Follow the instructions in reverse order to fold up the product and remove it.

Reattach the gate to its upright before moving the ladder.


When the ladder is being pivoted, ensure that it is held by the handrails to prevent injury when the platform automatically folds up. Replace the retaining strap on the gate and the support struts.

When sliding the lower part of the ladder, always hold it underneath the step to prevent trapping fingers between steps.

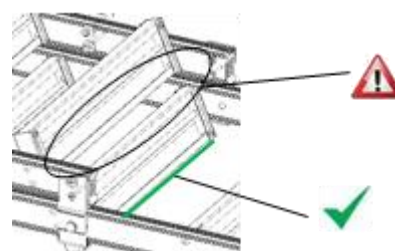


4 Moving the product

Carrying the product with two people

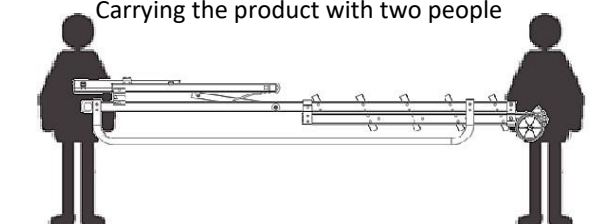


Using the transport wheels with one person

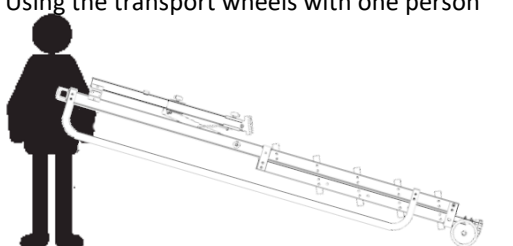



Directions for use:

- Check the following points before each use:
 - o The two slider locking pins, as well as the safety pins, are correctly installed.

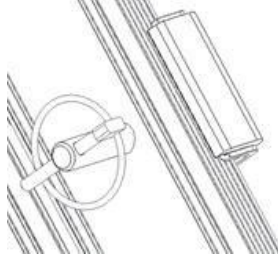

- o The feet and skates are in contact with the ground.
- o The platform lock is correctly engaged.
- o The platform should be horizontal or tilted slightly towards the slab.
- Before each use, visually check that the ladder is not damaged and is safe to use.
- Do not use a damaged ladder.
- Maximum total load: 150 kg
- Do not lean over the side of the ladder.
- Maximum number of users: 1
- Always face the ladder when climbing up or down.
- Keep a good grip on the ladder when climbing up or down. Have one hand on the ladder at all times; if this is not possible then take additional safety measures.
- Do not climb up or down the ladder when carrying equipment which is heavy or difficult to handle.
- Keep the gate open until the user has gone completely through.
- Do not lean on the gate.
- Ensure that there is enough space to raise the ladder before positioning it.
- The ladder should be used on firm level ground.
- Do not wear shoes which are not suitable for climbing ladders.
- Do not use the ladder if the user is not in a suitable physical condition to do so. It can be dangerous to use a ladder with some medical conditions or if taking medication, alcohol or drugs.
- Prevent the ladder from getting damaged by ensuring that it is attached, during transportation for example, and checking that it is correctly positioned.
- Check that the ladder is suited to the task.
- Do not use the ladder if it has mud, oil, snow, etc. on it.
- Do not use the ladder outside in bad weather.
- When positioning the ladder, assess the risk of collision with pedestrians, vehicles or any other obstacle.
- Identify potential electrical hazards in the working area, such as overhead power lines or any other exposed electrical installations, and do not use the ladder where there are electrical hazards.
- Do not use the ladder as a bridge.
- Do not modify the design of the ladder.
- Do not move the ladder whilst on it.
- The transport wheels should not be loaded when the ladder is in use.

Inspecting and using the ladder:

- Before using the ladder for the first time, thoroughly check the conformity of the product using the check sheet available on the website: www.tubesca-comabi.com
- Visually check that the ladder is in good condition before each use, particularly the safety devices: check that the bolts are tightly screwed, the shoes are in place, and that the step connection components are in good condition and have the correct geometry. Also check that no component is damaged.
- As with any height-access equipment, check the product periodically according to the check sheet available on the website www.tubesca-comabi.com. (Checks should be carried out at least once a year, and can be adapted depending on how often the product is used.)

Repair and maintenance:

- Where parts need to be replaced, only use TUBESCA-COMABI parts. See the manufacturer after-sales service sheet which is available on the website: www.tubesca-comabi.com.
- Regularly check and clean the ladder using a non-aggressive, non-corrosive product. (Recommendation: soapy water).
- This product should be checked periodically using the check sheet available on the website: www.tubesca-comabi.com.