



CONTROL SHEET

Pronor 2-section hand-operated extension ladder


Reference: 01222 3xx




Control date:	Site:	Control markings:
Inspector name:	Address:	



3

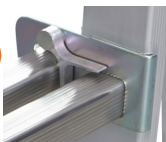


4

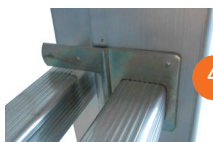

5



6

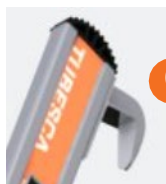

7



8



9



Perform a visual inspection before each use
Carry out a formal control every 6 months in the check sheet
Before the inspection, isolate and secure the product

CONFORMITY

General inspection of the product:

Perform a visual inspection of the overall state of the product

YES NO

Note the marking date of the product on the inner side of the upright (year - day number) **1**
 Example: 2020 - 032

☐☐

Check there are no damaged profiles and/or components (impacts, perforation, ...)

☐☐

Check that all fittings (screws, rivets) are correctly tightened or in place

☐☐

Visually inspect crimping (ladder-rung assembly) and that the rungs do not turn **2**

☐☐

Check that the ladder does not become dislocated

☐☐

Check that there is no play in the hooking legs and that the lock is in working condition. **3**

☐☐

Check that the steel stop is present and not deformed **4**
 (only on 01222 312 / 314 / 316)

☐☐

Check that there is no play in the handrail fitting **5**

☐☐

Check that the two hooks are present and correctly fitted (only if hooks option) **6**

☐☐

Check that the base is present and correctly fitted (except on 01222 306) **7**

☐☐

Check that footpads are present and in good condition **8**

☐☐

Check that the safety labels are present **9**

☐☐

Product conclusions: suitable ☐ to be repaired ☐ to be retired ☐

For spare parts, see the after-sales sheet available online in the "Documentation Centre" tab (After-sales split views category):
<https://www.tubescal-comabi.com/fr/centre-de-documentation>

Date of next check:

** Repairs must be performed by a qualified person. The product must be checked after repair.



FV_01222_3xx_ind_00
 15/12/2020