




CONTROL SHEET

Pronor 2-section combination ladder


Reference: 01252 0xx



Control date:	Site:	Control markings:
Inspector name:	Address:	



4

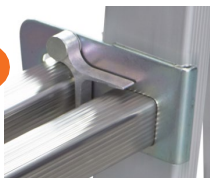

5

7



6



8



9

Perform a visual inspection before each use Carry out a formal control every 6 months in the check sheet Before the inspection, isolate and secure the product		CONFORMITY	
General inspection of the product: Perform a visual inspection of the overall state of the product		YES	NO
Note the marking date of the product on the inner side of the upright (year - day number) Example: 2020 - 032	1	☐	☐
Check there are no damaged profiles and/or components (impacts, perforation, ...)		☐	☐
Check that all fittings (screws, rivets) are correctly tightened or in place		☐	☐
Visually inspect crimping (ladder-rung assembly) and that the rungs do not turn	2	☐	☐
Check that the wire arm is present and functional	3	☐	☐
Check that the ladder does not become dislocated		☐	☐
Check that there is no play in the hooking legs and that the lock is in working condition.	4	☐	☐
Check that the steel stop is present and not deformed (only on 01252 012 / 014)	5	☐	☐
Check there is no play in the two hinge fittings	6	☐	☐
Check that the two hinge stops are present and correctly fitted	7	☐	☐
Check that footpads are present and in good condition	8	☐	☐
Check that the safety labels are present	9	☐	☐
Product conclusions: suitable ☐ to be repaired ☐ to be retired ☐			
For spare parts, see the after-sales sheet available online in the "Documentation Centre" tab (After-sales split views category): https://www.tubesca-comabi.com/fr/centre-de-documentation			
Date of next check:			

** Repairs must be performed by a qualified person. The product must be checked after repair.

