






CONTROL SHEET

STEPIUM Reference:



Control date:	Site:	Date:
Inspector name:	Address:	

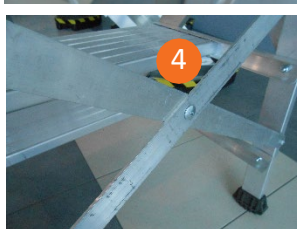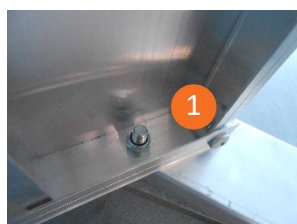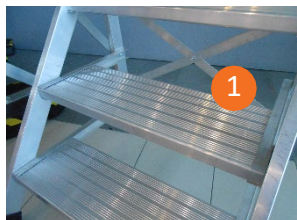

CONFORME AUX EXIGENCES
DE SECURITE Dcret 96.333



150KG
MAXI
1 MAXI
AUTANT

Perform a visual inspection before each use Carry out a formal control every 6 months by means of the check sheet (recommended) Before the inspection, isolate and secure the product	CONFORMITY	
General inspection of the product: Perform a visual inspection of the overall state of the product	YES	NO
Structure: Check that the product is stable and not wobbly	☐	☐
Check that all fittings (screws/nuts, self-drilling screw) are correctly tightened or in place	☐	☐
Check there are no damaged or missing profiles and/or components (impacts, perforation, ...)	☐	☐
Check that the steps have not been modified or pierced 1	☐	☐
Check that the steps are correctly fitted, in good condition and do not move 1	☐	☐
Check that the 4 footpads are not worn 2	☐	☐
Check that the 4 footpads are fully pushed in and fixed 2	☐	☐
Check that the 4 flat ends are present 3	☐	☐
Note the manufacturing date as indicated on the product label	☐	☐
Check that the cross-bars are present and correctly fitted 4	☐	☐
Safety labels Check that the safety labels (pictograms) are present 5	☐	☐
Product conclusions: suitable ☐ to be repaired ** ☐ to be retired ☐		
For spare parts, see the after-sales sheet available online in the "Documentation Centre" tab (After-sales split views category): https://www.tubescal-comabi.com/fr/centre-de-documentation		
Date of next check:		

** Repairs must be performed by a qualified person. The product must be checked after repair.

