




CONTROL SHEET

KOLOS Stepladder

Reference: 02375 81x



Control date:	Site:	Control On the label:
Inspector name:	Address:	

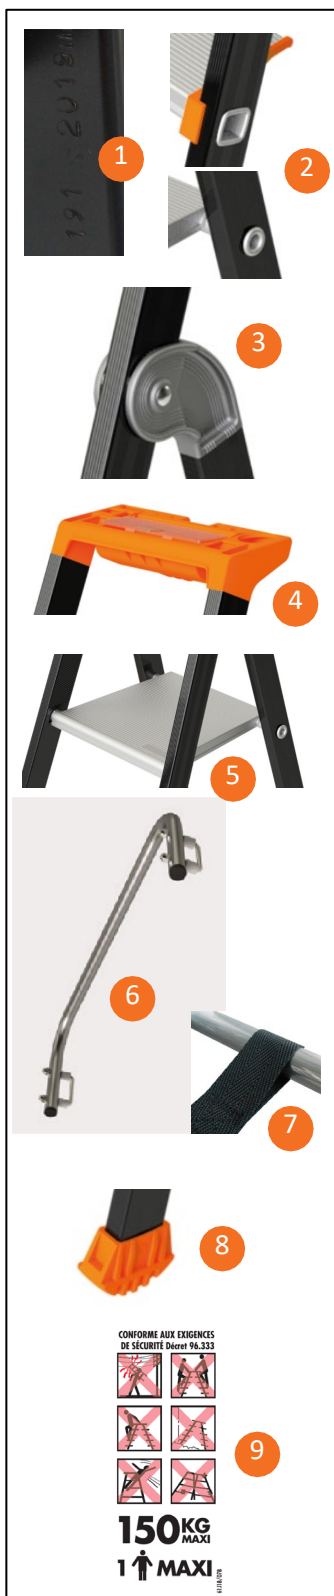

Perform a visual inspection before each use Carry out a formal control every 6 months in the check sheet Before the inspection, isolate and secure the product	CONFORMITY	
	YES	NO
General inspection of the product: Perform a visual inspection of the overall state of the product		
Note the marking date of the product on the inner side of the upright (year- day number) 1 Example: 2020 - 032	☐	☐
Check there are no damaged profiles and/or components (impacts, perforation, ...)	☐	☐
Check that all fittings (screws, rivets) are correctly tightened or in place	☐	☐
Visually inspect crimping (ladder-step, ladder-reinforcement and ladder-platform assemblies) and that the steps do not turn 2	☐	☐
Check that the stepladder does not become dislocated	☐	☐
Check that the two hinges are present, correctly fitted and operate as intended 3	☐	☐
Check that the tool tray is present and in good condition 4	☐	☐
Check that the platform is present, correctly fitted and in good condition 5	☐	☐
Check that the handrails are present, correctly fitted and in good condition (only for handrail option) 6	☐	☐
Check that the straps are present and not torn (only on 02375 817 / 818) 7	☐	☐
Check that footpads are present and in good condition 8	☐	☐
Check that the safety labels are present 9	☐	☐
Product conclusions: suitable ☐ to be repaired ☐ to be retired ☐		
For spare parts, see the after-sales sheet available online in the "Documentation Centre" tab (After-sales split views category): https://www.tubescalcomabi.com/fr/centre-de-documentation		
Date of next check:		

** Repairs must be performed by a qualified person. The product must be checked after repair.

