

MODUL Technical Manual

Ref.: 100-02379_83X

1. Equipment description:

The "MODUL" is a stepladder designed for intensive use. It complies with the EN 14183 standard.

It is a means of access and is not a workstation.

The range is comprehensive, featuring 5 access heights and grooved aluminium steps.

The steps are interchangeable.

The extra-wide steps provide excellent user comfort, which is highly appreciated.

The stepladder has been designed exclusively for use on flat surfaces.


This stepladder can only be used by one person at a time (maximum load 150 kg) (*see 2.3 Instructions for use*).

Range and specifications:

Reference						
02379831	0.20	1	0.50	0.40	2.20	2.6
02379832	0.40	2	0.67	0.64	2.40	4.2
*02379833	0.60	3	0.67	0.86	2.60	5.8
*02379834	0.80	4	0.67	1.07	2.80	8.3
*02379835	1.00	5	0.67	1.28	3.00	10.3



* Ramps 02379 814 only featured in 3-, 4- and 5-step models

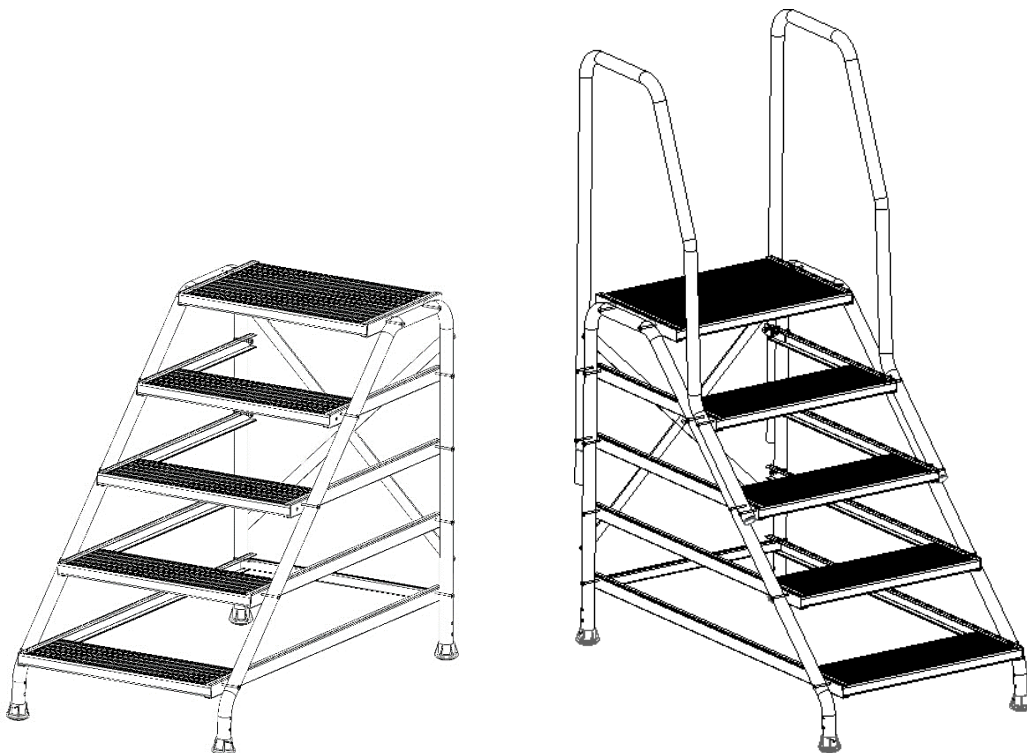

MODUL Technical Manual

Ref.: 100-02379_83X


2. Use:

2.1 Before use:


- Visually inspect the platform before each use to ensure that it isn't damaged in any way and is safe to use;
- Carry out regular checks on the product.

2.2 Using the product:

- Optional ramps can be fitted to the product to increase fall protection;

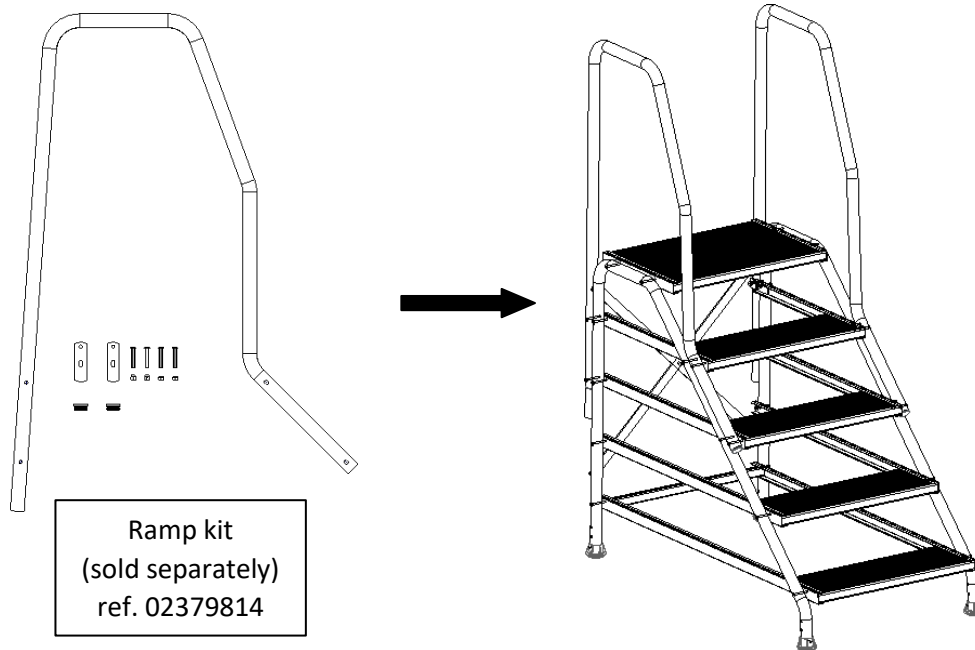

- A set of retractable wheels can be fitted to the stepladder to make moving it an effortless task.

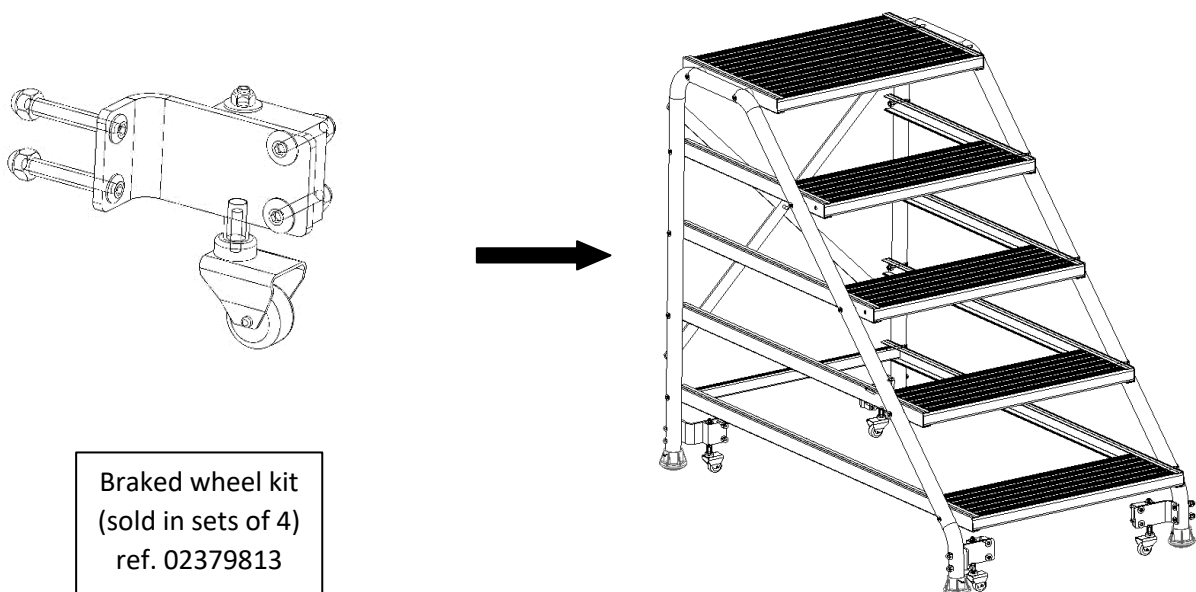

MODUL Technical Manual

Ref.: 100-02379_83X

2.3 Directions for use:

- It is essential that users read the manual before use;
- Visually inspect the product before use;
- The surfaces that the product is stood on must be horizontal and non-slip;
- All feet must be stable on the surface;
- Take the necessary precautions to prevent any unauthorised use of the product;
- Make sure that you wear shoes offering sure footing;
- The product's load must not exceed 150 kg;
- Only one person should climb on the product at a time;
- Do not attempt to reach a point too far away from the product, the user must have both feet firmly on the platform;
- Face the stepladder while stepping on and off it;
- Do not use product as handling equipment;
- Never move the platform if anyone is on it;
- Do not climb on the product if you are feeling dizzy or tired;
- Make sure that the work area is clear of any bare, live electrical conductors;
- The main safety instructions are indicated by pictograms on the product.

CONFORME AUX EXIGENCES
DE SÉCURITÉ Décret 96.333



150KG
MAXI

1  **MAXI**

61118/078

3. Maintenance:

- Check that the product is in a good general condition before each use and more particularly the safety components (the condition of the parts and their geometry, and if parts need to be replaced use TUBESCA-COMABI components only, see the manufacturer's after-sales service sheet <https://www.tubesca-comabi.com/fr/centre-de-documentation> in the after-sales exploded views section);
- After work is completed on each worksite, clean the walkway with a clean cloth;
- This product must be regularly checked and the results of these checks must be logged (see manufacturer's checklist).