




CONTROL SHEET PRESTO SCAFFOLDING

Reference: 02400_41x



Control date:	Site:	Control 1 On the label:
Inspector name:	Address:	

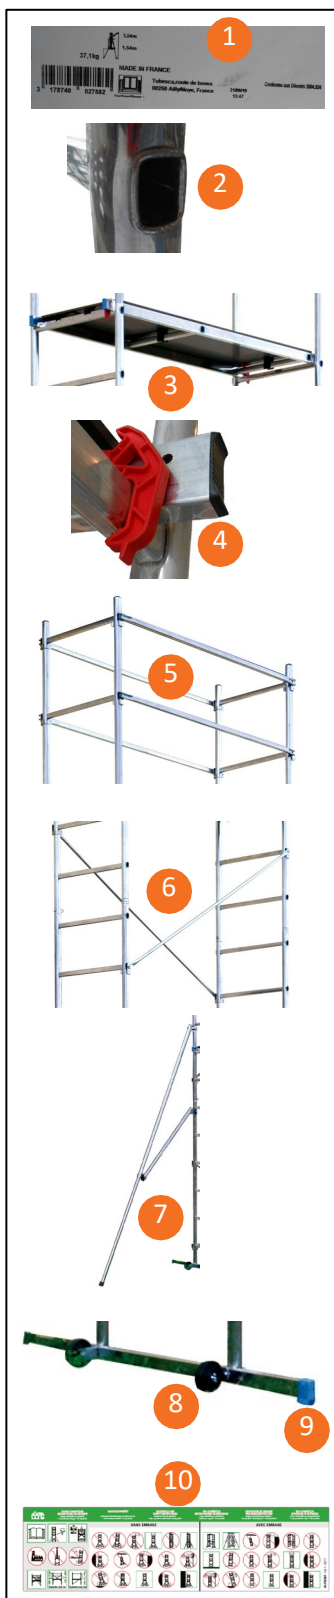

Perform a visual inspection before each use
Carry out a formal control every 6 months in the check sheet
Before the inspection, isolate and secure the product

General inspection of the product:

Perform a visual inspection of the overall state of the product

Check there are no damaged profiles and/or components (impacts, perforation, ...)

Check that all fittings (screws, rivets) are correctly tightened or in place

Visually inspect crimping (ladder-rung assembly)

Check that the scaffolding does not become dislocated

Check that the platform and spars are present, correctly fitted and in good condition

Check that the platform hooks are present, correctly fitted and operate as intended

Check that the guardrails are present and correctly fitted

Check that diagonals are present and correctly fitted

Check that the stabilisers are present, correctly fitted and operate as intended

Check that the transport wheels are present, correctly fitted and in good condition

Check that the bases and footpads are present and in good condition

Check that the safety labels are present

Product conclusions: suitable ☐ to be repaired ☐ to be retired ☐

For spare parts, see the after-sales sheet available online in the "Documentation Centre" tab (After-sales split views category):
<https://www.tubesca-comabi.com/fr/centre-de-documentation>

Date of next check:

** Repairs must be performed by a qualified person. The product must be checked after repair.

