




CONTROL SHEET

Prémur ladder

Reference: 02422 200



Control date:	Site:	Control markings:
Inspector name:	Address:	

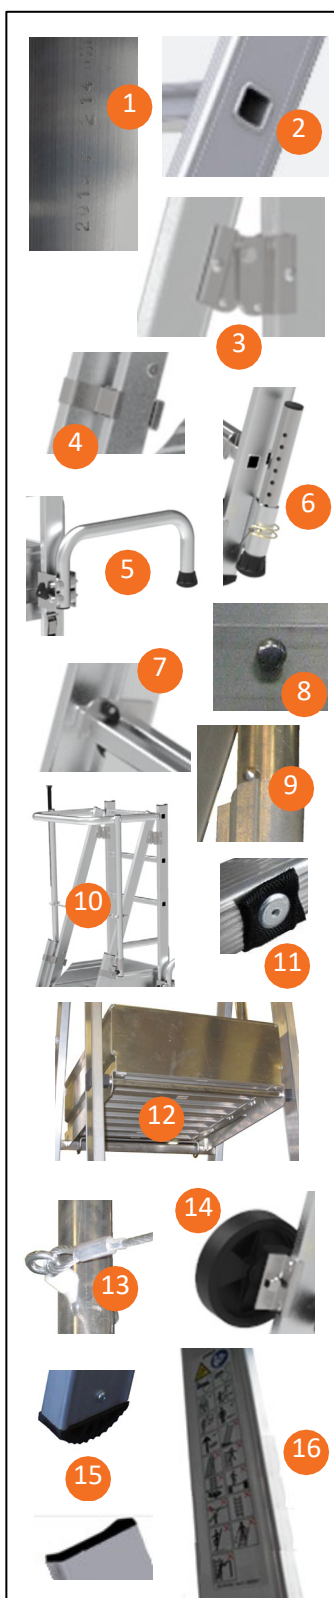

Perform a visual inspection before each use Carry out a formal control every 6 months in the check sheet Before the inspection, isolate and secure the product	CONFORMITY	
	YES	NO
General inspection of the product: Perform a visual inspection of the overall state of the product		
Note the marking date of the product on the inner side of the upright (year - day number) 1 Example: 2020 - 032	☐	☐
Check there are no damaged profiles and/or components (impacts, perforation, ...)	☐	☐
Check that all fittings (screws, rivets) are correctly tightened or in place	☐	☐
Visually inspect crimping (ladder-rung assembly) and that the rungs do not turn 2	☐	☐
Check that the ladder does not become dislocated	☐	☐
Check there is no play in the hinge fittings 3	☐	☐
Check the handrails are correctly fitted and the sections slide smoothly 4	☐	☐
Check that the hooks are correctly fitted and the clamps are correctly tightened 5	☐	☐
Check that the adjustable legs and the locking pins are present and that the whole operates as intended 6	☐	☐
Check that the hooking legs are present and correctly fitted and that the lock is in working condition. 7	☐	☐
Check that the ends of the platform rod are present and correctly fitted 8	☐	☐
Check that the guardrail locks are present and operate as intended 9	☐	☐
Check that the guardrail is present, well fitted and operates as intended 10	☐	☐
Check that the straps are present and not torn 11	☐	☐
Check that the platform is correctly fitted and in good condition 12	☐	☐
Check that the guardrail cable is present, correctly fitted and operates as intended 13	☐	☐
Check that guide wheels are present and in good condition 14	☐	☐
Check that footpads are present and in good condition 15	☐	☐
Check that the safety labels are present 16	☐	☐
Product conclusions: suitable ☐ to be repaired ☐ to be retired ☐		
For spare parts, see the after-sales sheet available online in the "Documentation Centre" tab (After-sales split views category): https://www.tubescaladder.com/fr/centre-de-documentation		
Date of next check:		

** Repairs must be performed by a qualified person. The product must be checked after repair.