




CONTROL SHEET

Insulated 2-section hand-operated extension ladder

Reference: 04322 4xx



Control date:	Site:	Control markings:
Inspector name:	Address:	

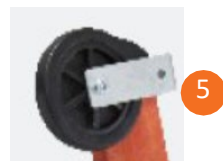

Perform a visual inspection before each use
Carry out a formal control every 6 months in the check sheet
Before the inspection, isolate and secure the product

CONFORMITY

General inspection of the product:

Perform a visual inspection of the overall state of the product

Note the marking date of the product on the inner side of the upright (year - day number)

Example: 2020 - 032

Check there are no damaged profiles and/or components (impacts, perforation, ...)

Check that all fittings (screws, rivets) are correctly tightened or in place

Visually inspect crimping (ladder-rung assembly) and that the rungs do not turn

Check that the ladder does not become dislocated

Check that there is no play in the hooking legs and that the lock is in working condition.

Check that the plastic stop is present and not deformed (only on 04322 412)

Check that the guide wheels are present and in good condition

Check that there is no play in the handrail fitting

Check that the base is present and correctly fitted

Check that footpads are present and in good condition

Check that the safety labels are present

Product conclusions: suitable ☐ to be repaired ☐ to be retired ☐

For spare parts, see the after-sales sheet available online in the "Documentation Centre" tab (After-sales split views category):
<https://www.tubesca-comabi.com/fr/centre-de-documentation>

Date of next check:

** Repairs must be performed by a qualified person. The product must be checked after repair.



FV_04322_4xx_ind_00
 15/02/2021