




# CONTROL SHEET

## 2/3 section rope-operated insulated extension ladder

Reference: 04332 3xx



|                       |                |                             |
|-----------------------|----------------|-----------------------------|
| Control date: .....   | Site: .....    | Control On the label: ..... |
| Inspector name: ..... | Address: ..... |                             |

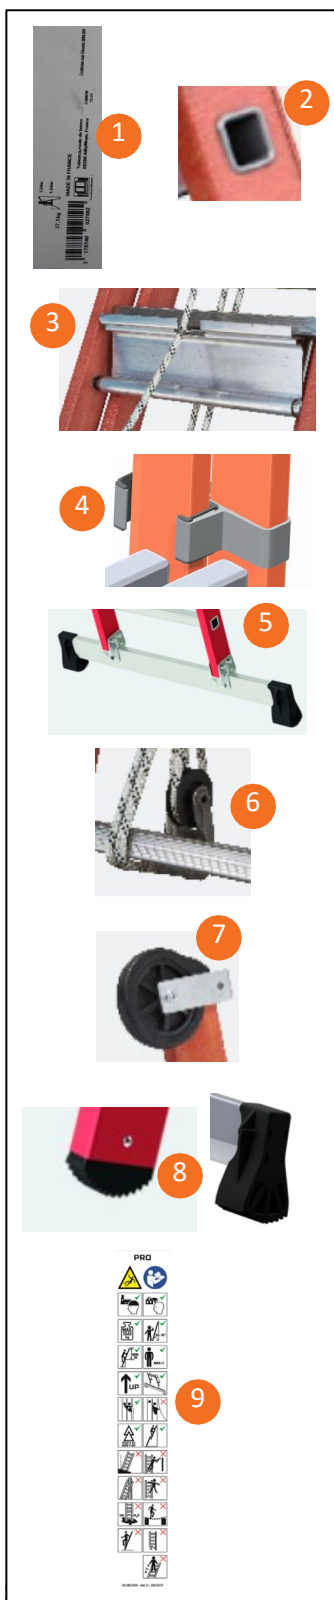

| Perform a visual inspection before each use<br>Carry out a formal control every 6 months in the check sheet<br>Before the inspection, isolate and secure the product                                                                                                   | CONFORMITY               |                          |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|--------------------------|
|                                                                                                                                                                                                                                                                        | YES                      | NO                       |
| <b>General inspection of the product:</b><br>Perform a visual inspection of the overall state of the product                                                                                                                                                           |                          |                          |
| Note the manufacturing date of the product as indicated on the label (day / month / year)<br>Example: 27/01/2020                                                                                                                                                       | <input type="checkbox"/> | <input type="checkbox"/> |
| Check there are no damaged profiles and/or components (impacts, perforation, ...)                                                                                                                                                                                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Check that all fittings (screws, rivets) are correctly tightened or in place                                                                                                                                                                                           | <input type="checkbox"/> | <input type="checkbox"/> |
| Visually inspect crimping (ladder-rung assembly) and that the rungs do not turn                                                                                                                                                                                        | <input type="checkbox"/> | <input type="checkbox"/> |
| Check that the rope is present and in good condition                                                                                                                                                                                                                   | <input type="checkbox"/> | <input type="checkbox"/> |
| Check that the ladder does not become dislocated                                                                                                                                                                                                                       | <input type="checkbox"/> | <input type="checkbox"/> |
| Check that the pivot lock is present and falls freely by gravity.                                                                                                                                                                                                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Check that the handrails and skids are present and operate as intended                                                                                                                                                                                                 | <input type="checkbox"/> | <input type="checkbox"/> |
| Check that the base is present and correctly fitted                                                                                                                                                                                                                    | <input type="checkbox"/> | <input type="checkbox"/> |
| Check that the pulley is present, correctly fitted and in good condition                                                                                                                                                                                               | <input type="checkbox"/> | <input type="checkbox"/> |
| Check that the top guide wheels are present and in good condition                                                                                                                                                                                                      | <input type="checkbox"/> | <input type="checkbox"/> |
| Check that footpads are present and in good condition                                                                                                                                                                                                                  | <input type="checkbox"/> | <input type="checkbox"/> |
| Check that the safety labels are present                                                                                                                                                                                                                               | <input type="checkbox"/> | <input type="checkbox"/> |
|                                                                                                                                                                                                                                                                        |                          |                          |
| <b>Product conclusions:</b> suitable <input type="checkbox"/> to be repaired <input type="checkbox"/> to be retired <input type="checkbox"/>                                                                                                                           |                          |                          |
| For spare parts, see the after-sales sheet available online in the "Documentation Centre" tab (After-sales split views category):<br><a href="https://www.tubesca-comabi.com/fr/centre-de-documentation">https://www.tubesca-comabi.com/fr/centre-de-documentation</a> |                          |                          |
| <b>Date of next check:</b>                                                                                                                                                                                                                                             |                          |                          |

\*\* Repairs must be performed by a qualified person. The product must be checked after repair.

