




CONTROL SHEET

COMPACT Fibreglass Stepladder

Reference: 04472 0xx



Control date:	Site:	Control On the label:
Inspector name:	Address:	

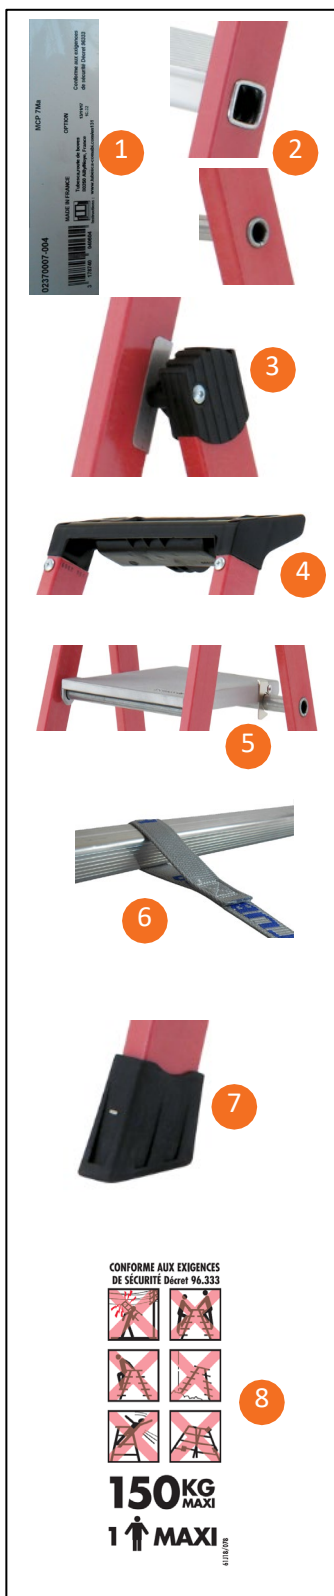

Perform a visual inspection before each use Carry out a formal control every 6 months in the check sheet Before the inspection, isolate and secure the product		CONFORMITY	
General inspection of the product: Perform a visual inspection of the overall state of the product		YES	NO
Note the manufacturing date of the product as indicated on the label (day / month / year) Example: 27/01/2020	1	☐	☐
Check there are no damaged profiles and/or components (impacts, perforation, ...)		☐	☐
Check that all fittings (screws, rivets) are correctly tightened or in place		☐	☐
Visually inspect crimping (ladder-step, ladder-reinforcement and ladder-platform assemblies) and that the steps do not turn	2	☐	☐
Check that the stepladder does not become dislocated		☐	☐
Check that the two hinges are present, correctly fitted and operate as intended	3	☐	☐
Check that the tool tray is present and in good condition	4	☐	☐
Check that the platform is present, correctly fitted and in good condition and that the hook operates as intended	5	☐	☐
Check that the straps are present and not torn (only on 04472 006 / 007)	6	☐	☐
Check that footpads are present and in good condition	7	☐	☐
Check that the safety labels are present		☐	☐
Product conclusions: suitable ☐ to be repaired ☐ to be retired ☐			
For spare parts, see the after-sales sheet available online in the "Documentation Centre" tab (After-sales split views category): https://www.tubescacomabi.com/fr/centre-de-documentation			
Date of next check:			

** Repairs must be performed by a qualified person. The product must be checked after repair.

